



十速科技股份有限公司
tenx technology inc.

**Advance
Information**

TP6829 2.4G RF Air Mouse

User Manual


**Tenx reserves the right to change or
discontinue this product without notice.**

tenx technology inc.

CONTENTS

- 1. USING THE AIR MOUSE FOR THE FIRST TIME.....2
 - 1.1. CHARGE THE BATTERY:2
 - 1.2. RECOGNIZE THE DEVICE:2
 - 1.3. SETUP THE AIR MOUSE:2
- 2. HOW TO USE AIR MOUSE3
 - 2.1. POWER ON AND POWER OFF:3
 - 2.2. WIRELESS CONNECTION:3
 - 2.3. AIR MOUSE MOTION CONTROL:3
- 3. AIR MOUSE WHEEL BUTTON.....4
- 4. AIR MOUSE JOYSTICK FUNCTION4
- 5. CHARGE THE AIR MOUSE BATTERY4

1. Using the Air mouse for the First time...

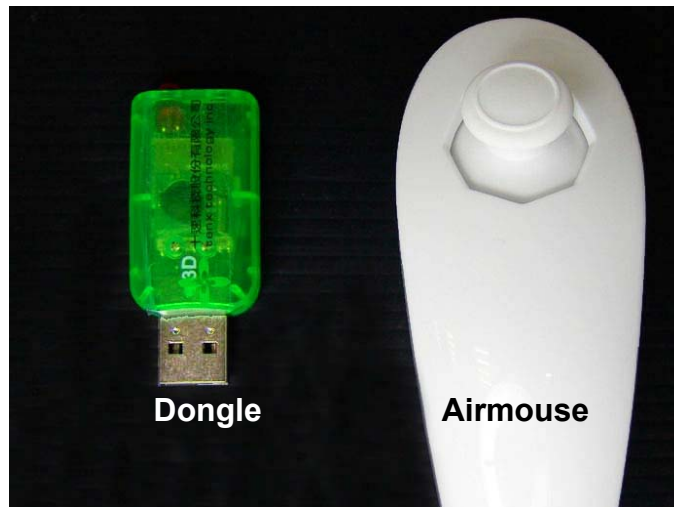

1.1. Charge the battery:

1. Plug the Air mouse in the PC USB port.
2. While the battery is charging, the Air mouse LED blinking frequency slows down; and the LED will stop blinking and remains a solid light once the battery is fully charged.

1.2. Recognize the device:

1. Plug the Dongle in the PC USB port
2. Press and hold the dongle connecting button until the LED turns on.
3. Release the connection button.
4. Press and hold the L and R keys of the Air mouse (over 2 seconds) until LED turns on.
5. Release the L and R key
6. When the wireless LAN is successfully connected between the dongle and Air mouse, the Air mouse LED light will be solid.

Note :

If the user wants to use the Air mouse to connect another Air mouse dongle, user must repeat the “Recognize the device” process to connect another dongle.

1.3. Setup the Air mouse:

1. After the first connection is successful, the mouse cursor will move automatically and randomly.
2. Please place the Air mouse on a stable platform (e.g. on the table) until the mouse cursor stop moving.
3. Now you can use the Air mouse.



2. How to Use Air Mouse

2.1. Power ON and Power OFF:

1. Press and hold the Air mouse L and R key (over 2 seconds) until the LED turns off / on.

2.2. Wireless connection:

1. Plug the Dongle in the PC USB port.
2. Press and hold the Air mouse L and R key (over 2 seconds) until the LED turns on.
3. Release L and R key. The Air mouse will start to search for the wireless signal.
4. When the wireless LAN is successfully connected between dongle and the Air mouse, the Air mouse LED light will be solid.

Note:

if the connection fails...

1. Please plug the dongle before turning on the Air mouse.
2. The distance between dongle and Air mouse must be within 10 meters.
3. If the connection stills fails, please repeat the step "1.2 Recognize the device".

2.3. Air mouse motion control:

The user can point the Air mouse in any direction to control the cursor's movement (the Left and Right or Up and Down).




3. Air Mouse wheel button

1. When the user wants to use the Air mouse to control the scroll bar, please press and hold R-key to enable this function.
2. Release R-key to disable the wheel button function

4. Air mouse Joystick function

1. The joystick function allows the user to control the mouse cursor at a very slow speed.

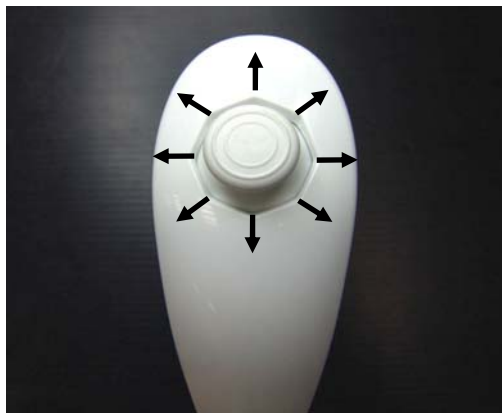

5. Charge the Air mouse Battery

1. The Air mouse battery must be charged in the following situations:
 - Using the Air mouse for the first time.
 - LED blinks during the working mode.
 - The Air mouse can not be powered on. **The user must repeat the step 1 as shown in the “1. Using the Air mouse for the First time...”**
2. Plug the Air mouse in a USB port supplying a Voltage of 5V.
3. While the battery is charging, the Air mouse LED blinking frequency will slow down; and the LED will stop blinking and remain a solid light once the battery is fully charged,

Note :

When the user removes the Air mouse from the USB port, the Air mouse will switch to wireless connection mode automatically.